



moir action-table & high-table



User manual EN

- 1- Instructions on function**
- 2- Castors matching the floor type**
- 3- Maintenance**
- 4- Cleaning**

1 / Instructions on function

The ***moin*** action tables and ***moin*** high-tables can be used spontaneously and are intended for temporary use, for working, discussing and hospitality.

For space-saving storage, the table top can be folded into the vertical position. In a linear fashion, an infinite number of tables can now be placed on the edge of the room or in the storage room.





To use,

grasp the top of the table top and press it down into the horizontal position until it locks into place.

To transport and store, lift the red lever to release and then fold the tabletop into the vertical.

Accessories


The practical hooks under the table top are used to hang bags or to hang or wind up cables.

The black handle facilitates manoeuvring in the transport position. It can also be used to lift the table over a few steps.

Linking

All **moin** action tables are equipped with elastic cords which are used to fix them to the next table and to align the table system. They are tensioned by hand and pulled over the nearest fixing cylinder (and released again if necessary).

The alignment of the tables to each other can now be slidably adjusted. In this way, large or small table arrangements can be easily configured.

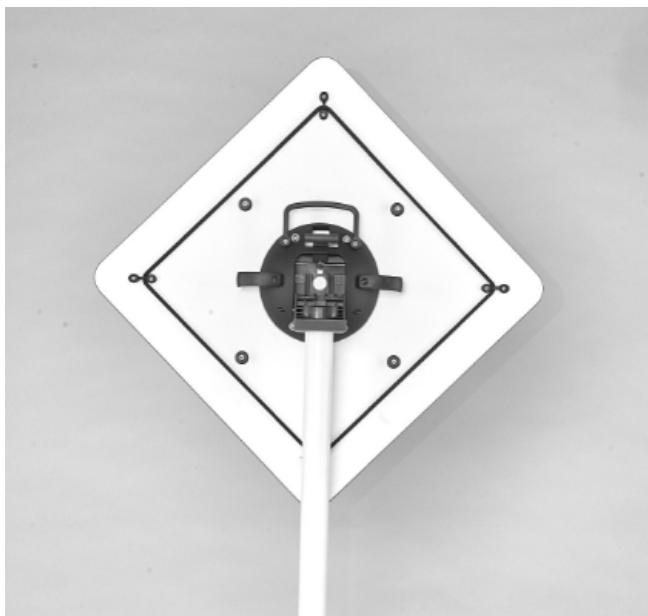

Locking brake

Once the optimum position of the tables has been reached, the castors are locked. All tables are equipped with four lockable castors. The Delta locks are pressed down with the foot on the cantilever and released with the tip of the foot in the upper part of the brake.

Special function for the high table:

Height adjust the knurled wheel to compensate for wobble on the floor.



2/ Adequate Castor quality for different floor types

In the standard version the tables are equipped with black soft all-round 'Move' double castors with a no-noise pin from *Gross und Froehlich*. All castor surfaces in the "Move" collection are available upon request, for all floor types, respectively .. Here the rule applies:

- hard floor = soft castors
- soft floor = hard castors

The castors of the ***moin*** action tables and high tables are delivered with a standard transport protection which is easily removed by the customer upon receipt.

3/ Maintenance

The technical components are maintenance-free. Bearings are lubricated for life or designed as ungreased plain bearings.

4/ Cleaning instructions:

Cleaning the table top

FENIX NTM is a mat and anti-fingerprint surface. No special maintenance is required: just a damp cloth with warm water or a mild detergent. Almost all regular household cleaning products or disinfectants can be safely used.

Thermal repair of micro-scratches

Thermal healing of superficial micro-scratches is also possible. By using an iron and a damp towel/cloth, thermal healing can be applied to the relevant area of the product if scratches have not penetrated the surface.

To know more about this, please check:

<https://www.fenixforinteriors.com/en/maintenance>

Cleaning the aluminium base

Black coated aluminium components: Dust or light dirt can be cleaned with a mild soap solution or glass cleaner.

Polished aluminium components: Please clean only with a dry microfiber cloth.

Aluminium is a light metal with a soft surface, making it very susceptible to scratches. Never use hard brushes or metal sponges for cleaning.

Marks, for example from the soles of shoes on the base can be removed with a soft, non-abrasive eraser.

Cleaning castors

Remove any stubborn tangled hair carefully with scissors. Regularly remove hair and dirt from castors with a vacuum cleaner with a blunt nozzle.

Advice on cleaning

If you have any questions regarding use and care, please feel free to contact us at any time:

Störiko product design GmbH

Godeffroystrasse 40

22587 Hamburg

mail@roomtool.com

www.roomtool.com

T. +49 40 20 96 58 39

HRB 153814

Sitz Hamburg

Ust-IdNr. DE-814482244